

USER MANUAL

CONVECTOR



MODEL: SVCA01STCO



TECHNICAL CHARACTERISTICS

MODELO: SVCA01STCO SERIES

Models covered by this instruction sheet: STAND Convector heater with thermostat.

RATED POWER INPUT: 2000W RATED VOLTAGE RANGE: AC220-240V 50Hz

IMPORTANT Read these instructions fully before using the heater. Retain these instructions for future reference.

ASSEMBLY OF THE HEATER

Before using the heater, the feet (supplied separately in the cartoon), must be fitted to the unit. These are to be attached to the base of the heater using the 4 self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side moldings.

SAFETY INSTRUCTIONS (to be read before operating the heater)

- 1. Do not use the heater unless the feet are correctly attached.
- 2. Ensure the power supply to the socket into which the heater is plugged is in accordance with the rating label on the heater and that the socket is earthed.
- $3. \ \mbox{Keep}$ the power cord away from the hot body of the heater.
- 4. Warning: Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- 5. Warning: In order to avoid overheating , do not cover the heater.
- 6. Indoor use only.
- 7. Do not place the heater on carpets having a very deep pile.
- 8. Always ensure that the heater is placed on a firm level surface.
- 9. Do not place the heater close to curtain or furniture in order to avoid a fire hazard.
- 10. Warning: heater is not located immediately below a socket-outlet.
- 11. Do not insert any object through the heat outlet or air grilles of the heater.
- 12. Do not use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
- 13. Always unplug the heater when moving it from one location to another.
- 14. Warning: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.



- 15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance or a person responsible for their safety.
- 16. Children should be supervised to ensure that they do not play with the appliance.

OPERATION OF THE HEATER

Note: It is normal when the heaters are turned on for the first time or when they are turned on after having been used for a long period of time the heaters may emit some smell and fumes. This willdisappear when the heater has been on a short while.

Convector heater with thermostat SVCA01STCO

Choose a suitable location for the heater, considering the safety instructions above. Insert the plug of the heater into a suitable socket.

Turn the thermostat knob fully in some clockwise directions to the maximum setting. Turn on the heating elements by means of the rocker switches on the side panel. When the heating elements are on the switches will illuminate. For maximum heat output both switches should be on.

When the desired room temperature has been reached, the thermostat knob should be turned slowly anti-clockwise until the thermostat is heard to click off and the lights on the elements switches are seen to go out. After this the heater will keep the air temperature in the room at the set temperature by switching on and off automatically.


Convector heater with thermostat and fan SVCA01STCO

All the above instructions for model SVCA01STCO (above)also apply to model SVCA01STCO turbo.

Model SVCA01STCO turbo also incorporates an internal fan, which can be switched on independent of the heating elements.

Fan Operation: This is operated by means of the switch with the fan symbol alongside it. The fan will only operate with the thermostat in the "on" position and can be used when the heating elements are "on" to blow warm air into the room.

In warm conditions, the fan can be used with the heating elements "off" to blow cool air into the room.

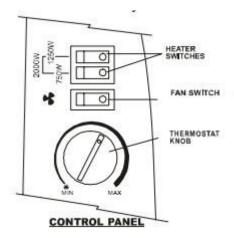

CLEANING THE HEATER

Always un-plug the heater from the wall socket and allow it to cool down before cleaning.

Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth. Do not use any detergents or abrasives and do not allow any water to enter the heater.

STORING THE HEATER

When the heater is not used for long period of time it should be protected from dust and stored in a clean dry place.


WALL-MOUNTING THE HEATER

Caution: -there should be a distance of at least 40cm between the lower part of the appliance and the floor.

-the feet must be removed before mounting the appliance on the wall.

- Measure the distance between the two slots situated at the back of appliance (see picture A)
- Drill two holes at the same distance in the wall and insert a plug in each hole you just drilled. Place the brackets facing the holes as indicated on picture B and attach them in this position with the screw supplied.
- 3. Before attaching the appliance on the brackets, attach the two other brackets underneath the appliance as indicated on picture C.
- 4. Attach the appliance on the wall. To do so, hold it in such way that the slots are facing the brackets; insert the appliance halfway onto the brackets until the appliance can go down into the grooves of the brackets.
- 5. As soon as the appliance is positioned correctly, take a pencil and mark a dot in the hole of each bracket situated underneath the appliance.
- 6. Then take off the appliance by proceeding the other way around compared to point 4 above.
- 7. Drill a hole in the wall on each dot you just marked and insert a plug in each hole.
- 8. Attach the appliance back on the wall as indicated in point 4, insert screws through the


brackets underneath the appliance and tighten without forcing.

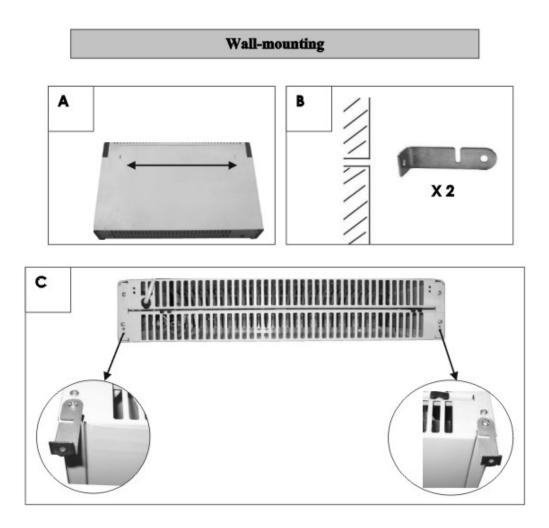

Conformity with directives

This product is CE marked to denote conformity with Directives 2014/35/EU (Low Voltage) and the EMC directive (2014/30/EU), as amended.

Correct Dis	posal of thi	sproduct
CONCELDIS	posul of the	produce

 

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.