

svan

**QUARTZ HEATER
INSTRUCTION MANUAL**

Model: SVCA02EB

Model	Voltage/Frequency	Power
SVCA02EB	220-240V~ 50Hz	1200W

Dear customer,

We thank you very much for having purchased one product of ours. We kindly ask you to read and save this instruction manual.

CAUTION

- Remove the packaging and make sure that the appliance is intact. In case of doubt do not use the appliance and contact your local authorised service agent. Do not leave packaging materials like bags and staples within reach of children.

- Before switching on appliance check if the electrical voltage and frequency of the circuit correspond to those indicated on the rating label of appliance.

- The appliance has to be connected to a circuit according the rules-in-force concerning the civil-plant. The plant has to be related to the nominal-power of the appliance.

- The appliance only for **normal indoor domestic/household use only**. Do not use it for any other application as it could get dangerous.

- The manufacturer is not responsible for any eventual-damages caused by improper or faulty-use.

The use of every electrical appliance calls-for the awareness of some basic rules, such as:

---Never touch the appliance with wet or damp hands or feet, or other conductor.

---Never immerse or expose the appliance to any liquid or atmospheric-conditions (rain, sun, etc.=and so on).

- The appliance must be always placed on a flat and stable surface. Do not place on soft surface, like a bed, where openings may become blocked.

- Do not use the appliance near liquids or combustible/inflammable-matters or explosive gas.

- A correct operation of the appliance is obtained when the appliance is installed vertically. Do not switch on the appliance near pieces of furniture, curtains, shelves, etc.

- The appliance must have clear place on both sides and at the back and a minimum 1metre clearance in front of air outlet, so that both the air inlet and outlet are not blocked.

- Do not use in very dusty areas as dust may accumulate on the heating elements and cause overheating.

- To avoid personal injury or property damage, never insert fingers, pencils or any other objects through the air inlet or outlet opening.

- Avoid touching hot surfaces, always use the handles.

- When the appliance is not in use switch it off and unplug it. Make harmless the parts of the appliance which could be handled-hazardously by children for playing.

- Do not put the supply-cord on the appliance when it is still warm. Do not kink or wrap the supply cord around the appliances, particularly where it enters the appliance. Ensure the supply cord is fully extended before use and arrange it so that it is not in contact with any part of the appliance. Do not pull on the supply cord, never move, carry or hang the appliance by the supply cord. Do not let supply cord hang over edge of table.

- Do not connect the appliance to extension-cords or multiple-outlets.
- Before cleaning the appliance or carrying-out any maintenance switch off the whole system and unplug it.

If the appliance is not working switch it off without tampering with it. If any repair is required please contact your local authorised agent and ask for original spare parts. Otherwise safety of the appliance may be compromised.


WARNINGS

1. Children should be supervised to ensure that they do not play with the appliance.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental-capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. In order to avoid overheating, do not cover the appliance.
5. The appliance must not be located immediately below a socket-outlet.
6. Do not use this appliance with a programmer, timer or any other device that switches the heater on automatically, since a fire-risk exists if the appliance is covered or positioned incorrectly.
7. Do not use this appliance in the immediate-surroundings of a bath, a shower or a swimming-pool.

INSTALLATION For WALL MOUTING MODE

The appliance must be installed at least 1.8m above the floor.

Drill two holes in wall and have a distance of 1.8m from the floor. The diameter of the hole just contained the inflated plastic pipe. The distance between two holes just with distance between two hang-holes in the appliance. After tucking the inflated plastic pipe, fix screw, do not screw the entire length into the wall, leave at least 3-5mm out of the wall. Make sure screw is fixed firmly and hangs the appliance. The screw should be inserted rabbet of the appliance bottom.

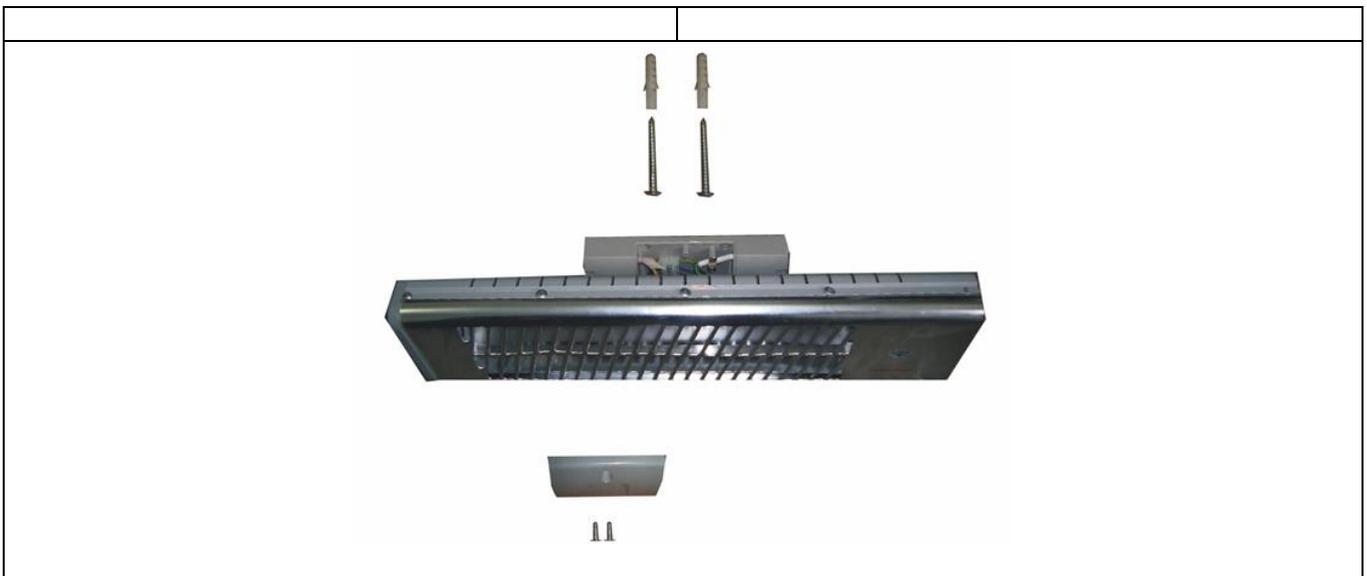

OPERATION

PRECAUTION

Check that the outlet has at least a 10 AMPERE current-carrying-capacity.

BEFORE OPERATION

Set master-switch with OFF position, Plug in the appliance, Tight connection between plug and socket so as to avoid the overheating plug and malfunction.

Operation

WHEN THE APPLIANCE IS NOT IN USE

Unplug appliance by grasping plug and pulling it from the socket, never yank the supply cord.

NOTICE

When the appliance is in use, please do not open the door or window continually otherwise it will influence the heating effect.

It is normal for appliance to emit some smell and fume when it is turned on for the first time or when turned on after not being used for a long period of time. This smell will disappear when the appliance has been turned on for a short time.

The appliance can be portable by holding the handle situated in the rear-part of the appliance.

SAFETY DEVICE**MAINTENANCE**

After use and before cleaning always unplug the appliance and wait until the item is cool.

The appliance should be cleaned regularly to stop dirt and dust building up which will affect its performance.

Wipe exterior surface of the appliance with a moistened cloth. Not rinse with water directly. Do not clean the painted-parts with emery-flour or solvents and use only a moistened-cloth.

Use the appliance when the body is dried completely after cleaning the heater.

To store the appliance, put the appliance back into its original packaging and store it in a clean dry place.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.