

svan

FAN HEATER



Model: SVCA04CV



INSTRUCTION MUANUAL

SVAN TRADING S.L.
C/Ciudad de Cartagena, 20. Paterna (46988). SPAIN.
info@svanelectro.com
96060034

Please read these instructions for use and have a good look at the illustration before using the appliance.

This appliance is not intended for use by persons(including children)with reduced physical,sensory or mental capabilities,or lack of experience and knowledge,unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

The heater must not be located immediately below a socket-outlet.

Do not use this heater in the immediate surroundings of a bath,a shower or a swimming pool!

GENERAL SAFETY

- DO NOT COVER, RESTRICT AIR INLET OR USE TO DRY CLOTHES
- THE SURFACE OF THIS FAN HEATER IS HOT. CLOSELY SUPERVISE ANY CHILDREN AND PETS WHEN IN USE.
- DO NOT USE FAN HEATER NEAR FLAMMABLE OR HEAT SENSITIVE ITEMS.
- USE IN UPRIGHT POSITION ONLY AND DO NOT LEAVE UNATTENDED.

ELECTRICAL SAFETY

- FOR INDOOR USE ONLY.
- SWITCH OFF AND UNPLUG WHEN NOT IN USE.
- DO NOT PULL THE HEATER ALONG BY THE CORD OR USE IF DAMAGED.
- DO NOT USE HEATER IN HUMID OR WET ENVIRONMENTS.
- IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY AN ELECTRICIAN OR SIMILARLY QUALIFIED PERSON, TO AVOID HAZARD.

TO USE

1. Turn the heater to the "OFF" position before plugging in.
2. The operating temperature is selected by a combination of the power switch and thermostat. The hottest setting will be when the heater is at the "High" setting and thermostat is turned to "Maximum".
3. To determine the correct working temperature for your conditions, turn the heater to "High" and the thermostat to "Maximum". The power light will be activated and the heater will start. When a comfortable temperature has been reached turn the thermostat slowly anticlockwise until the heater turns off. The temperature will now be kept constant.
4. If you want to lower the operating temperature select the "Low" heater setting and repeat the above process.
5. For air circulation only (no heat) select "Fan only".
6. The heater is fitted with an automatic cut out in the event that it overheats. If this activates, turn the heater to the off position and un plug. Allow the heater to cool and remove anything restricting the airflow before using the heater again. If the automatic cut out operates repeatedly contact a qualified electrician for advice.

NOTES

- The power lamp will be on if the temperature is below the setting of the thermostat.
- For maximum benefit, close windows and doors.
- Do not cover the ventilation holes as this will cause overheating and will activate the cut out.

CLEANING AND MAINTENANCE

To maximize the efficiency of the heater clean regularly.

1. Switch power switches to "OFF" position, unplug and allow the heater to cool.
2. Wipe surfaces with a soft damp cloth. Do not use detergent or abrasives as this will scratch the surface.
3. Ensure the intake grill is free from dust, as this will reduce the airflow. Light accumulated dust can be removed with soft cloth or vacuum cleaner.
4. Allow surface to fully dry before using the heater again.

MAXIMISE THE LIFE OF YOUR HEATER

- Avoid knocking or scratching the heater.
- Do not use in dusty environments.
- When not in use store in clean, cool and dry area.


Operation instructions

1. Turn the thermostat switch to the minimal value, at the same time turn the heat select switch to the "O" position (see picture).
2. Plug in the appliance, and turn the thermostat switch to the maximum position. Then turn the heat select switch to choose air or warm air and the temperature of warm air as below. While working the indicator light will be on.
 - 2.1 Turn the heat select switch to " " position, the heater blows cool air.
 - 2.2 Turn the heat select switch to "I" position, the heater blows warm air, working at 1000W.
 - 2.3 Turn the heat select switch to "II" position, the heater blows warm air, working at 2000W.
 - 2.4 Turn the heat select switch to "O" position, the heater stops working, the indicator light will be off.
3. Adjust the thermostat switch to suitable position for desired temperature setting.
 - 3.1 Check if the thermostat switch is on the maximum position.
 - 3.2 When you feel the room temperature comfortable, turn the thermostat switch anti-clockwise slowly to the minimal position until the appliance stops working.


Then the thermostat switch will keep the room temperature at the desired temperature automatically.

You can also turn the thermostat switch anti-clockwise to the minimum position or turn the thermostat switch clockwise to maximum position to make the temperature lower or higher.

- 1-Thermostat Switch
- 2-Heat select switch
- 3-Power indicator light
- 4- Handle
- 5-Air outlet grill
- 6- Air inlet grill

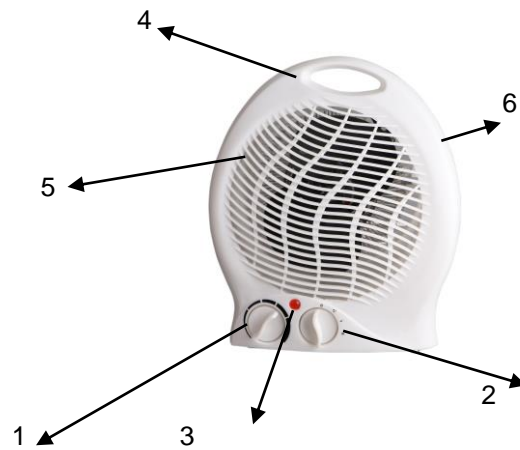

Enviroment friendly disposal

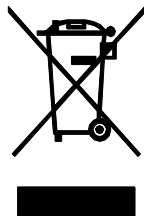

You can help protect the enviroment!

Please remember to respect
the local regulations:
hand-in the non-working
electrical equipments to
an appropriate waste disposal.