

svan

HAND BLENDER


Model No.: SVBM0310



INSTRUCTIONS FOR USE


Read these instructions for use carefully before you use the appliance and save them for future reference.

Technical Specification

Model No	SVBM0310	Insulation	
Rated Voltage	AC 220-240V~		
Rated Frequency	50/60Hz	Rated continuous working time	≅ 1 min
Rated Power	1000W	Rated intermission time	≅ 1 min

General Description

- A. Variable speed regulator
- B. Speed button I
- C. Speed button II
- D. Motor unit
- E. Blender shaft
- F. Measuring cup with lid

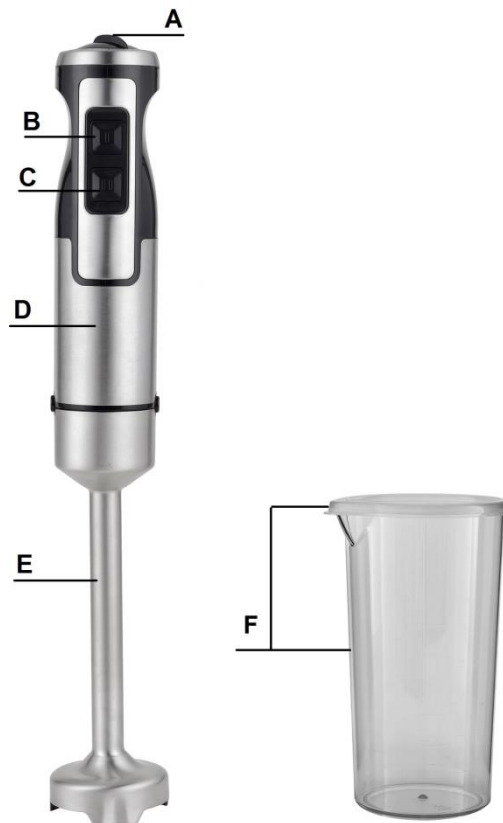

Important

Never immerse the motor unit and whisk coupling unit in water or any other fluid, not rinse it under the tap. Use only a moist cloth to clean them.

- ◆ Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- ◆ Do not use the appliance if the mains cord, the plug or other parts are damaged.
- ◆ Repairs or the replacement of the mains cord must only be done by authorized service personnel. Faulty, unqualified repair work may cause considerable hazards to the user.
- ◆ Never let the appliance run unattended.
- ◆ This appliance is intended for household use only.

- ◆ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ◆ Especially when operating the hand blender attachment in hot liquids, do not immerse the blender shaft into-or remove it from the liquid while the appliance is switched on.
- ◆ Children should be supervised to ensure that they do not play with the appliance.
- ◆ Children are not allowed to use the appliance without supervision.
- ◆ Do not touch the blades, especially when the appliance is plugged in. The blades are very sharp.
- ◆ If the blades get stuck, unplug the appliance before you remove the ingredients that block the blades.
- ◆ Always unplug the appliance when it is left unattended and before you assemble, disassemble, clean, store, change accessories or approach parts that move during use.
- ◆ Care should be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.

Setting the speed

When activating switch “I”, the processing speed corresponds to the setting of the variable speed regulator. The higher the speed setting, the faster and finer the chopping results will be.

For maximum processing speed, press the “II” switch. You may also use the “II” switch for instant powerful pulses without having to manipulate the speed regulator.

How to operate your hand blender

The hand blender is intended for :

- blending liquids, e.g. dairy products, sauces, fruit juices, soups, mixed drinks and shakes.
- mixing soft ingredients, e.g.
- pureeing cooked ingredients, e.g. for making baby food.

1. Attach the blender bar to the motor unit(‘ click’).
2. Immerse the blade guard completely in the ingredients.
3. Pressing the normal or turbo speed button to switch on the appliance.
4. Move the appliance slowly up and down and in circles to blend the ingredient.

When blending directly in the saucepan while cooking, take the pan from the stove first to protect the appliance from overheating.

Care and cleaning

Cleaning of the appliance, its parts and accessories is easiest immediately after use.

- ◆ Unplug the appliance and detach the accessories before cleaning.
- ◆ Clean the beaker and blender shaft in warm water with some washing-up liquid.
- ◆ The blade unit of blender bar can be cleaned while still attached to the motor unit by immersing them in warm water with some washing-up liquid and letting the appliance run for a while.
- ◆ Wipe the motor unit with a moist cloth
- ◆ When processing foods with colour(e.g. carrots), the plastic parts of the appliance may become discoloured. Wipe these parts with vegetable oil before cleaning them.

Do not immerse the motor unit into water.

Environment

Meaning of crossed –out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact you local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.



SVAN TRADING S.L.

C/ Ciudad de Cartagena, 20.

Paterna (46988). SPAIN.

info@svanelectro.com 960600034