

svan

HAND BLENDER


Model No.: SVBM0310ACC



INSTRUCTIONS FOR USE


Read these instructions for use carefully before you use the appliance and save them for future reference.

Technical Specification


Model No	SVBM0310ACC	Insulation	
Rated Voltage	AC 220-240V~		
Rated Frequency	50/60Hz	Rated continuous working time	≧ 1 min
Rated Power	1000W	Rated intermission time	≧ 1 min

General Description

- A. Variable speed regulator
- B. Speed button I
- C. Speed button II
- D. Motor unit
- E. Blender shaft
- F. Coupling unit
- G. Beaters
- H. Hooks
- I. Measuring cup with lid

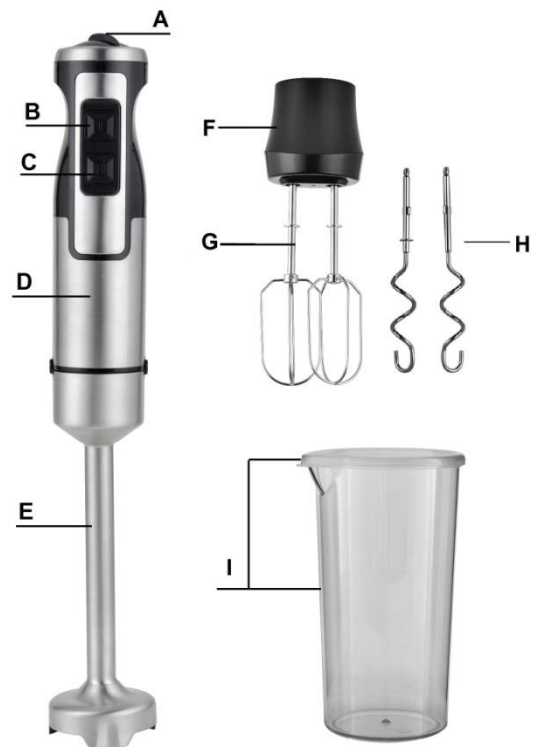

- J. Pusher
- K. Processor lid
- L. Processor bowl
- M. Chopper blade
- N. Insert holder
- O. Insert for slicing
- P. Insert for shredding
- Q. Insert for julienne
- R. Insert for granulating

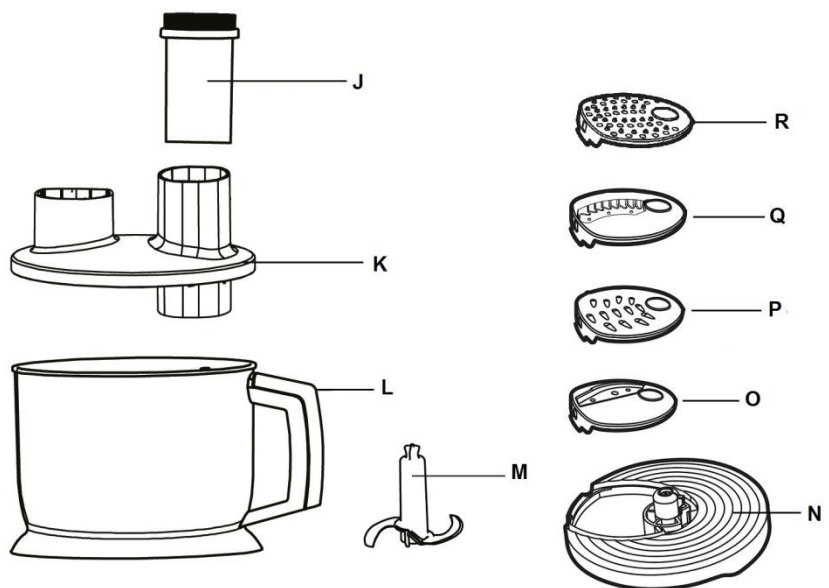

Important

Never immerse the motor unit and whisk coupling unit in water or any other fluid, not rinse it under the tap. Use only a moist cloth to clean them.

- ◆ Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- ◆ Do not use the appliance if the mains cord, the plug or other parts are damaged.
- ◆ Repairs or the replacement of the mains cord must only be done by authorized service personnel. Faulty, unqualified repair work may cause considerable hazards to the user.
- ◆ Never let the appliance run unattended.
- ◆ This appliance is intended for household use only.
- ◆ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ◆ Especially when operating the hand blender attachment in hot liquids, do not immerse the blender shaft into-or remove it from the liquid while the appliance is switched on.
- ◆ Children should be supervised to ensure that they do not play with the appliance.
- ◆ Children are not allowed to use the appliance without supervision.
- ◆ Do not touch the blades, especially when the appliance is plugged in. The blades are very sharp.
- ◆ If the blades get stuck, unplug the appliance before you remove the ingredients that block the blades.
- ◆ Always unplug the appliance when it is left unattended and before you assemble, disassemble, clean, store, change accessories or approach parts that move during use.
- ◆ Care should be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.

Setting the speed

When activating switch “I”, the processing speed corresponds to the setting of the variable speed regulator. The higher the speed setting, the faster and finer the chopping results will be.

For maximum processing speed, press the “II” switch. You may also use the “II” switch for instant powerful pulses without having to manipulate the speed regulator.

How to operate your hand blender

The hand blender is intended for :

- blending liquids, e.g. dairy products, sauces, fruit juices, soups, mixed drinks and shakes.

- mixing soft ingredients, e.g.
 - pureeing cooked ingredients, e.g. for making baby food.
 1. Attach the blender bar to the motor unit(‘ click’).
 2. Immerse the blade guard completely in the ingredients.
 3. Pressing the normal or turbo speed button to switch on the appliance.
 4. Move the appliance slowly up and down and in circles to blend the ingredient.
- When blending directly in the saucepan while cooking, take the pan from the stove first to protect the appliance from overheating.

Beaters&hooks

1. Insert the beaters or kneaders to the coupling unit, and push until a positive click is felt.
2. Connect the coupling unit to the motor unit.
3. Plug in.
4. With the ingredients in a bowl of an appropriate size, place the beaters/kneaders into the bowl.
5. Pressing the normal speed button to switch the appliance. As the mixture thickens, increase the speed. If the machine starts to slow or labour, increase the speed.

Important:

- **Kneaders only** -When making bread dough, we recommend that the dough load does not exceed 450g flour.
- To protect your handmixer, don't use it for long time with doughs, heavy cake mixtures, etc. Switch it off as soon as you've got the right consistency.

Hints

- When creaming for cake mixtures, use butter or margarine at room temperature or soften before use.
- To avoid overloading your mixing bowl, select one of an appropriate size.
- Large quantities and thick mixtures may require a longer mixing time
- When whipping cream, use of a high-sided bowl is recommended to minimize splashing.

Food processor attachment

The chopper is intended for chopping meat, cheese, onions, herbs, garlic, carrots, walnuts, hazelnuts, almonds etc.

For chopping hard goods, use the “turbo” switch.

Do not chop extremely hard food, such as nutmeg, coffee beans and grains.

Before chopping...

- ◆ Pre-cut meat, cheese, onions, garlic, carrots, chillies.
- ◆ Remove stalks from herbs, un-shell nuts
- ◆ Remove bones, tendons and gristle from meat.

1. Place the blade on the centre pin of the bowl and give it a turn to lock into place.
2. Put the ingredients in the chopper bowl.
3. Put the food processor lid onto the chopper bowl. Turn the lid anti-clockwise to lock it.
4. Insert the motor unit into the coupling unit until it locks.
5. Pressing high speed button to switch the appliance.
6. After use, press release button to remove the motor unit.
7. Turn the lid clockwise to unlatch it and lift it up.
8. Carefully take out the blade by turning and pulling it, before removing the processed food.

Mixing light dough

Using the chopper blade, you may also mix light dough like a pancake batter or a cake mixture based on up to 250g flour.

For a pancake batter, for instance, first pour liquids into the bowl, then add flour and finally eggs. Pressing "TURBO" the switch, mix the batter until smooth.

Slicing/shredding

Use the slicing insert, you can slice cucumbers, onions, mushrooms, apples, carrots, radishes, raw potatoes, courgettes, cabbage.

Use the shredding insert, you can shred apples, carrots, raw potatoes, beetroot, cabbage, cheese (soft to medium).

Granulating insert and Julienne insert for potato

1. Press the insert onto the insert holder.
2. Place the insert holder on the centre pin of the bowl.
3. Attach the food processor lid onto the bowl. Turn the lid anti-clockwise to lock it.
3. Insert the motor unit into the coupling unit until it locks.
4. Fill the food to be processed into the filling tube. Never reach into the filling tube when the appliance is switched on. Always use the pusher to feed in food.
5. Pressing the low speed button to switch the appliance.

The pusher – tips and warning

Do not exert too much pressure on the pusher when you press ingredients down the feed tube.

There are two kinds of pusher(a small one and a big one) for this appliance:

1. Use the big pusher to push big blocks of ingredients into the processing cup.
2. For slim material (such as ham, cucumber, carrot etc.), put the material trough the hole of big pusher, use the small pusher to push it. The small pusher can be taken out of the big pusher by turning it in a anti-colckwise direction.
3. Pre-cut large ingredients to make them fit into the feed tube.
4. Fill the feed tube evenly for the best results.

Care and cleaning

Cleaning of the appliance, its parts and accessories is easiest immediately after use.

- ◆ Unplug the appliance and detach the accessories before cleaning.
- ◆ Clean the beaker, the processor bowl, the blades and the holder in warm water with some washing-up liquid.
- ◆ The blade unit of blender bar and the whisk can be cleaned while still attached to the motor unit by immersing them in warm water with some washing-up liquid and letting the appliance run for a while.
- ◆ Wipe the motor unit, the whisk coupling unit and the processor lid with a moist cloth
- ◆ When processing foods with colour(e.g. carrots), the plastic parts of the appliance may become discoloured. Wipe these parts with vegetable oil before cleaning them.

Do not immerse the motor unit, the whisk coupling unit and the processor lid into water.

Environment

Meaning of crossed –out wheeled dustbin:



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact you local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.

SVAN TRADING S.L.

C/ Ciudad de Cartagena, 20. Paterna (46988). SPAIN.

info@svanelectro.com 960600034