

## STORAGE

- Never wrap the cord around the outside of the Toaster.
- When not in use, disconnect the Toaster and store in a dry, safe place, out of reach of children.

## SPECIFICATIONS

TYPE	SVTO06575V
RATED VOLTAGE	220-240V
RATED FREQUENCY	50Hz
RATED POWER	750W

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

Keep the appliance and its cord out of reach of children less than 8 years

### Cleaning your toaster

To clean your toaster, first remove the plug from the main outlet, disassemble the toaster after the products cool down , then open bread holder, Clean the toaster with a soft, dry cloth and wipe dry afterwards, never use water.

### Notice

The appliances are not intended to be operated by means of an external timer or separate remote-control system.

SVAN TRADING S.L.

C/ Ciudad de Cartagena, 20. Paterna (46988). SPAIN.

info@svanelectro.com 960600034

# svan

## VERTICAL TOASTER

**Model: SVTO06575V**

## USER MANUAL



750W 220-240V ~ 50Hz



## KNOW THE TOASTER

- A. Bread Frame
- B. Handle
- C. Switch on/off
- D. Bread holder



## GENERAL SAFETY INSTRUCTIONS

- Please read this Instruction Manual carefully before use.
- Keep these instructions; the guarantee certificate; the sales receipt; and if possible the gift box with the inner packaging.
- Switch off the Toaster and remove the mains plug from the mains supply whenever the Toaster is not in use.
- Never use a fork or other sharp objects to clean the Toaster. Doing so can damage the Toaster.
- Under no circumstances must the Toaster be placed in water or other liquids.
- Test the Toaster and the cable regularly for damage. If there is damage of any kind, the Toaster should not be used.
- In case of any repairs, replacement of cord or plug, or adjustment, please consult a qualified technician, or take the Toaster to an authorised service facility.
- To avoid accidents, never touch the surface of the Toaster when it is operating.
- Before plugging or unplugging the mains plug of the Toaster from the mains supply, make sure the Bread Carriage Lever is set at the RELEASE (OFF) POSITION.
- Keep these instructions in a safe place for future reference.
- The bread may burn, therefore do not use the toaster near or blow combustible material, such as curtains
- During operation, the appliance must be placed in a well ventilated area.

## USING THE TOASTER

- When using the Toaster for the first time, remove all packaging.
- Place the Toaster on a suitable flat surface.
- Check to ensure everything has been removed.
- Do not place bread in the Toaster for the first use. Instead, Switch on to allow the heating elements to preheat and burn off any dust and residues which may have accumulated during manufacturing or assembly.
- Once the above is completed, do not operate the Toaster when empty.

### The Toaster is now ready for use.

- Place the Toaster on a suitable flat surface.
- Plug the mains plug of the Toaster into the mains supply.
- Insert slices of bread into the side Slots (Max: 4 slices).
- Switch on
- When the toasting reach perfect colors, then switch off, People have to stand by the toaster and don't walk away.
- After use, unplug the Toaster from the mains supply.

## CLEANING AND MAINTAINANCE

- Always unplug the Toaster from the mains supply and allow to cool before cleaning.
- Do not use abrasive cleansers. Simply wipe the exterior with a clean damp cloth and dry thoroughly.
- The Bread frame should be cleaned regularly.