

svan

FLAT TOASTER

Model: SVTO0690H

USER MANUAL



CAUTION

KEEP ALL PACKAGING, BOX, PLASTICS, ETC. UNTIL YOU CHECK THE GOOD OPERATION OF YOUR TOASTER.

Make sure your MYWAVE toaster is not damaged. In case of doubt, DO NOT USE IT and contact our after-sales service or the establishment where you purchased it.

For safety, please keep all packaging (plastic bags, boxes, polystyrene, etc.) out of the reach of children or animals.

Before plugging the appliance into the mains supply, check that the voltage corresponds with that stated on the characteristics plate. The use of an earthed socket is recommended.

GENERAL SECURITY INDICATION

- Before using the appliance, check that the mains voltage is same as the one on the characteristics or with the one indicated in the Technical Data at end of this manual.
- This appliance has been designed for domestic use only and indoors. Do not use it for professional or external purposes.
- This appliance may be used by children 8 years of age or older and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given appropriate supervision or instruction regarding to the use of the appliance in a safe manner and understand the hazards involved. Children should not play with the appliance. The cleaning and maintenance to be performed by the user should not be performed by children unless they are over 8 years old and under supervision. Keep the appliance and its cord out of reach of children.
- The appliance is not intended to be operated by means of an external timer or a separate remote control system.
- Never leave your appliance unattended when it is in use.
- Check regularly that the cable is not damaged. Do not use your appliance if the cord or appliance is damaged and take it to a qualified service technician.
- Never immerse the appliance in water or any other liquid, for cleaning or for any other reason. Never insert it in the dishwasher, except for the parts indicated in the Cleaning section.
- Do not use near heat sources.
- The power plug must be unplugged before cleaning the appliance.
- Any repairs should be performed by a qualified service technician.
- Do not use the appliance outdoors and place it in a dry place.
- Do not leave it out in the open.
- Do not use attachments not recommended by the manufacturer, this may present a risk to the user and may damage the device. Use only original accessories and spare parts.
- Never move the appliance by pulling on the cord. Make sure that the cable does not get caught in any protrusions in order to avoid possible falls. Avoid twisting the cord around the appliance or twisting it around.
- Place the appliance on a sufficiently flat and stable surface to prevent it from falling.
- Let the appliance cool down before cleaning and storing.
- Ensure that the appliance does not come into contact with easily flammable materials such as curtains, fabrics, etc. When it is in operation, as it could cause a fire. Leave a minimum distance of one meter between the apparatus and flammable materials.
- Do not clean the appliance with metal or abrasive utensils to avoid the risk of short circuits and damage the surfaces of the finish.
- Do not cover the appliance or its ventilation holes as this could result in a fire.

SPECIAL SAFETY INSTRUCTIONS

- This device should only be touched by the side handles.
- Do not move your toaster while it is running.
- The top rack may remain hot minutes after last use.
- The exterior surface heats up during operation, be careful not to touch it.
- Remove the tray after each use.
- Do not use your toaster to defrost food.

USE

- Insert the plug into a grounded plug.
- During the first use, turn the timer knob to maximum without bread on the grill. Your toaster will emit smell and smoke, this is normal and will disappear after this first use.
- Put the bread on the rack. Always leave a 1cm gap between each slice, to avoid overheating your toaster.
- Turn the timer knob to the desired position. The resistors will light up slowly.
- After the set time, a bell will sound and your toaster will turn off automatically.
- You can interrupt toasting at any time by turning the timer knob to 0.

CLEANING AND MAINTENANCE:

- Unplug and allow to cool before cleaning your toaster.
- Do not immerse your toaster in water or any liquid. The exterior surface can be cleaned with a clean, damp cloth.
- If stains continue to occur, soapy water can be used, preventing them from entering through the ventilation slots.
- Do not use abrasive cleaners or sharp utensils to clean the exterior surface.
- The pickup tray can be removed for cleaning. To do this pull the lower groove out. Once clean and dry, carefully insert it into its slot.

Attention

Failure to follow the recommendations for use and cleaning of this manual may result in partial or total loss of warranty.

Handling by personnel other than the manufacturer may cause partial or total loss of the warranty.

Technical data:

Model: SVTO0690H

Power supply: 220-240V, 50Hz

Power: 900W

This device has been approved in accordance with all EU directives (CE, RoHS) as well as electromagnetic compatibility and low voltage guidelines, and has been built in accordance with safety regulations.



Disposal of old electrical appliances.

The European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

SVAN TRADING S.L.

C/ Ciudad de Cartagena, 20.

Paterna (46988). SPAIN.

info@svanelectro.com

960600034