

svan

USER MANUAL

SVTO0710X



SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock,do not immerse the cord, plug or appliance in the water or any other liquid.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The temperature of accessible surfaces may be high when the appliance is operating.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.

- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.

- To prevent fire or shock hazard do not expose this appliance to rain or moisture.



- Surface are liable to get hot during use.

- This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments.
- By clients in hotels, motels and other residential type environments.
- Bed and breakfast type environments.
- Farm houses.

PARTS DESCRIPTION

1. Bread groove

2. Crumb tray

3. Color controller

4. Lift handle

5. Bunrack lift handle

6. Defrost button

7. Reheat button

8. Cancel button



BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)
- When the device is turned on for the first time, a slight odor will occur. This is normal, ensure adequate ventilation. This fragrance is only temporary and will disappear soon.

USE

- The device is adjustable with the color controller of just crispy roasted to dark brown. To achieve the degree of browning desired, you can experiment with the setting. Also the quality and condition of the bread is also a factor. Dry and stale bread toasts more quickly, fresh and frozen bread take a little longer. Do not use a knife, cutlery or any other object to remove the bread from the device or to clean the device. If the bread becomes lodged in the toaster, unplug the appliance before attempting to remove it. Caution! Bread can burn.
- Put a slice of bread in one of the slots. You can place 2 slices in the device. Make sure the crumb tray is in place before use.
- Plug the power cord into a grounded outlet. Turn the color controller to your desired position. Press the handle completely down to start the toasting process.
- Once the bread has been toasted to the desired color, the handle will pop up automatically.


- During toasting, you can check the color of the bread. If it is to your satisfaction, you can press the cancel button to cancel the operation at any time.
- If the bread is frozen, perform the same operations and press the defrost button. The indicator will be illuminated. In this mode the bread will be toasted to your desired color.
- If you want to reheat cold toasted bread, press the reheat button and the indicator will be illuminated. This mode has a fixed time setting.
- The carriage handle will automatically spring up and end up the reheating process.
- The toaster is equipped with a bun warmer, this rack can be used for warming up buns and baguettes.

CLEANING AND MAINTENANCE

- Before cleaning, unplug the appliance and wait for the appliance to cool down.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.
- Pull out the crumb tray and remove the crumbs. By using the device frequently, repeat this every week.
- Do not use a metal object (fork, knife) to clean the inside of the appliance as this may damage the heating elements.

ENVIRONMENT



This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This  symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

SVAN TRADING S.L.

C/ Ciudad de Cartagena, 20.

Paterna (46988). SPAIN.

info@svanelectro.com

960600034