


svan

User manual
SVTO08214X



Read this manual carefully and keep it for future reference.

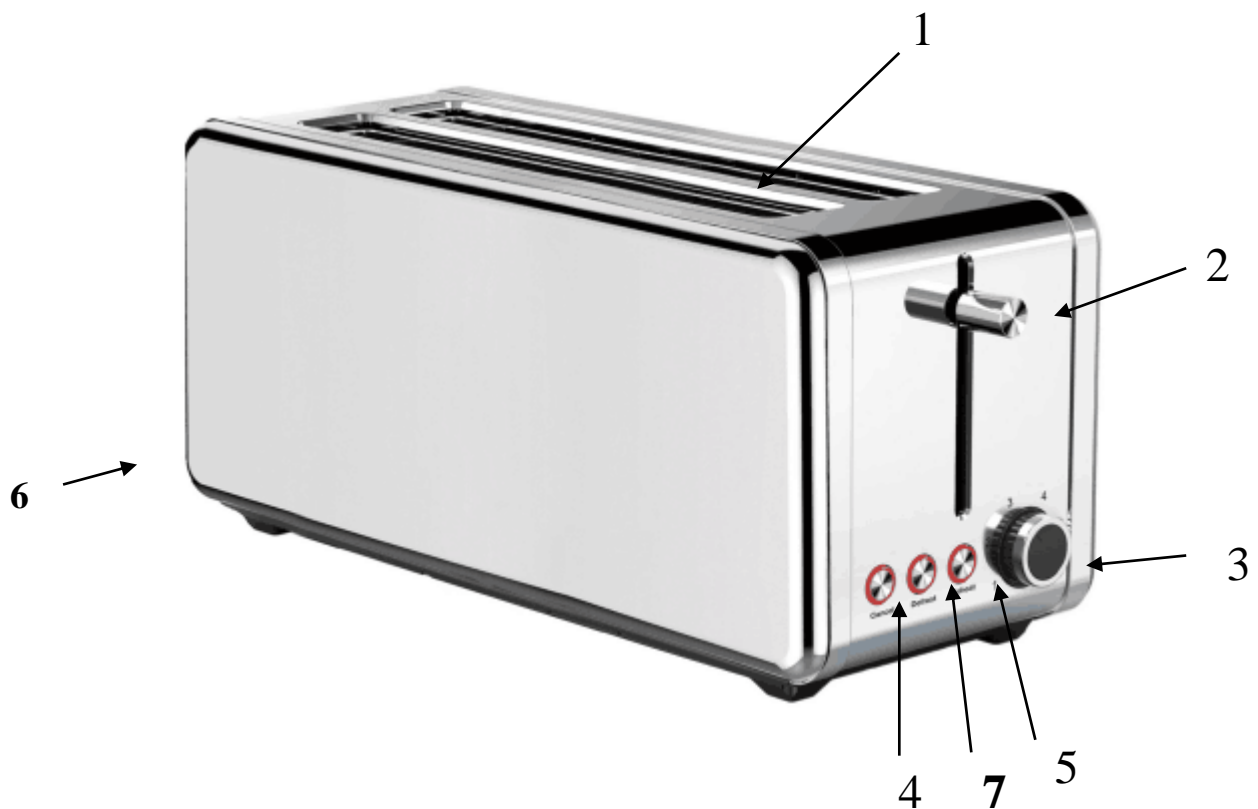

- 1. BREAD SLOT
- 2. LOADING HANDLE
- 3. BROWNING CONTROL
- 4. CANCEL FUNCTION
- 5. DEFROST FUNCTION
- 6. CRUMB TRAY
- 7. REHEAT FUNCTION

General safety Instructions

- **Please read the operating instructions carefully before using the appliance.**
- Please keep these instructions, the guarantee slip. The receipt and if possible the box with inner packaging in a safe place!
- This appliance is intended exclusively for private and not for commercial use.
- Always remove the plug from the socket when the appliance is not in use or when you are attaching accessories, cleaning it or in the event of a malfunction. Switch off the appliance. Do not pull the cable, pull the plug.
- Keep children away from the appliance to keep them safe from electric shocks. Make sure that the appliance is out of the reach of the reach of children. Ensure that the cable does not hang down.
- Check the cable and the appliance regularly for damage. Do not switch on the appliance if it is damaged.
- Do not repair the appliance yourself, but consult an authorized professional instead.
- Keep the appliance and the cable away from heat, direct sunlight, moisture, sharp edges and such like.
- Never leave the appliance unsupervised if it is use! Always switch off the appliance if you are not using it, even if only for a brief period.
- Only use original parts.
- Never use the appliance outside.
- Never submerge the appliance in water or any other liquid. Do not allow the appliance to come into contact with water or other liquids. Do not use the appliance with wet or moist hands.
- Remove the plug from the socket immediately if it is moist or wet. Do not touch the water!
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard;
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.

- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use the appliance for its intended purpose
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The surfaces are liable to get hot during use
- After you finish using this product, please recycle the product for disposal in accordance with local regulations.

*) Please observe the following "Special Safety Instructions..." .

Special Safety Instructions for this Appliance

- Only use the appliance if supervised (very dry bread may catch fire if toasted).
- The metal parts heat up! Danger of burns!
- Do not insert any forks, knives or such like in the toasting slot.
- Do not place the appliance anywhere near inflammable objects (e.g. curtains, wood, etc.)!


Operation

1. Only connect the appliance to a correctly installed safety plug (220-240V 50/60Hz).
2. Turn the selector switch clockwise to set the toasting level from the lightest stage 1 to the darkest stage 6. If in any doubt, start with the lower setting (the black mark on the selector switch shows you the setting).
3. Insert sliced bread into the toasting slot and push down the lever until it locks.
4. The appliance starts toasting. The appliance switches off immediately once the set degree of toasting has been reached. The toast then pops up automatically.
5. The appliance has heat-insulated casing. However, as metal parts still heat up during operation, please allow cooling down before you put it away.
6. The toaster only allowed 4 slices of the toaster to be toasted at a time.
7. The grill is only allowed to adjust to the minimum toast.

Cleaning

- Before cleaning, remove the plug from the socket and allow the appliance to cool down.
- Use a moderately damp cloth to clean the outside of the appliance.
- Do not use any aggressive or scrubbing detergents.
- Grasp the crumb shaft by the loop and pull it out, remove the bread residue and push the shaft back in.

Disposal of Packaging and product

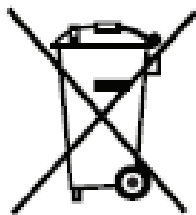

Dispose of packaging in an environmentally-friendly manner. This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the frame work for the return and recycling of used

appliances as applicable throughout to the EU.

PACKAGE INFORMATION: Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

SVAN TRADING S.L.
C/ Ciudad de Cartagena, 20.
Paterna (46988). SPAIN.
info@svanelectro.com
960600034