

**svan**

**HAIR DRYER**

**SVSP142**

**240V-2200W**

**INSTRUCTION MANUAL**

## **PARTS INSTRUCTION**



1. Air exit grill
2. Air inlet grill
3. Cool switch
4. Off/low-speed/high-speed
5. Cool/warm/hot
6. Handle
7. Hanging loop
8. Power cord

### **Using the dryer**

When making up your hair, you can use this one with concentrator nozzle.

1. Select the cool shoot position. Using cool shot has a good protection on hair, which has been dried and made up. There are two switches (0/1/2) on the handle. One (above) regulates the speed of the motor (and thus the airflow), by pressing the 1 or 2, 1 file for a slow, 2 file for high speed, 0 file for turning off the power supply. The other switch (below) regulates three different temperatures, 0 for cool wind, 1 for warm and 2 for hot wind
2. After washing towel your hair and then use the dryer. Plug in appliance and select the switch position for the right temperature and airflow.
3. Once your hair is dry set the switch off "0" position and unplug the dryer.

This model with a big diffuser, it can help you to make more style of the hair.



This model also with a rotary nozzle, it can increase the wind area and blow the hair in every angle



### **Important**

1. Connect the dryer to 220-240 volt outlet.
2. Never use in the bathtub, shower, or over a filled sink.
3. Do not use cleaning solutions or abrasives for cleaning the hair dryer.
4. Never lay it down on a humid pillow or blanket when in use.
5. Make sure that the air inlet and air exit grills are free when using the unit. The dryer is protected against overheating. If the air inlet is accidentally covered, the dryer will stop automatically. Switch off and allow to cool down for a few minutes before attempting to restart.
6. Disconnect after use.

7. Children are not aware of potential hazards. Do not allow children to operate this appliance. Make sure they are under supervision whenever they use the hair dryer.

### **Cleaning your dryer**

Please always disconnect your dryer before cleaning.

Do not immerse in water. Protect your dryer unit against dust or oil. From time to time remove dust and hair from the air inlet grill with a small brush. You can clean your appliance with a slightly damp cloth and dry it up with a dry cloth provided the hair dryer is disconnected from the mains supply first.

### **Warning:**

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Do not use this appliance near water in bathtubs, basins or other vessels.
4. When the hair dryer is used in a bathroom, unplug the appliance after use since the proximity of water presents a hazard, even when the hair dryer is switched off.
5. Do not pull the cord with unnecessary force. Do not damage or modify the cord, if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
6. Correct disposal of this product.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

SVAN TRADING S.L.  
C/ Ciudad de Cartagena, 20.  
Paterna (46988). SPAIN.  
info@svanelectro.com  
960600034